

Automatic By-Pass Valve



The automatic by-pass valve is designed to maintain a minimum flow rate in heating systems fitted with thermostatic radiator valves.

Product	Part No.
22mm angle auto bypass valve	07 02 020

Application

The automatic by-pass valve is designed to maintain a minimum flow rate in heating systems fitted with thermostatic radiator valves. When all the TRVs are open the by-pass valve remains closed, allowing the full boiler output to circulate around the heating system.

As TRVs sense that selected room temperatures are reached and start to close, the by-pass valve starts to open, maintaining optimum flow through the boiler and so eliminating possible damage to the boiler and pump. Installation of the by-pass valve will minimise noise often experienced when flow through the boiler decreases.

Installation

The by-pass should be installed between the flow and return with flow in the direction of the arrow.

If a higher capacity is required for large installations it is possible to install two or more valves in parallel.

How we measure up

Dimensions (mm)



Made for simplicity

- Maintains optimum flow
- Automatic operation
- Set and forget
- Ensures quiet operation
- High quality
- Reliable


Setting

The valve can be manually adjusted from 0.05 Bar to 0.5 Bar. A setting of 0.2-0.3 Bar is sufficient for most common installations. If the differential pressure is too low or the by-pass flow is too high, the pressure setting should be increased. If the differential pressure is too high or the by-pass flow too low, the pressure setting should be decreased.

Getting technical

	HTS3 Cylinder Thermostat
Connections	22mm
Setting range	0.05 to 0.5 Bar
Working pressure	10 bar
Working temp.	120°C intermittent/110°C continuous

Setting Chart

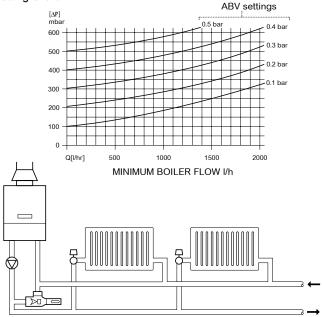

draytoncontrols.co.uk

Customer & Technical Support: 0333 6000 622

D30-9

In accordance with our continuous improvement procedures, we reserve the right to change design features and specifications without prior notification. The Data contained in this document is for guidance only. Drayton accepts no liability for any consequential losses, injury or damage resulting from the use of this document or the information contained within.









