


## How To Use Your RTS 1

### ***Important Note:***

***RTS 1 thermostats are ELECTRONIC with a relay output. Unless connected to a 230V mains supply the relay will not operate, no 'click' will be heard and the call for heat contact will remain open.***

#### ***To set the temperature set point***

- Rotate dial **clockwise** to decrease set point against marker i.e. turn heating off.
- Rotate dial **anti-clockwise** to increase set point against marker i.e. turn heating on.

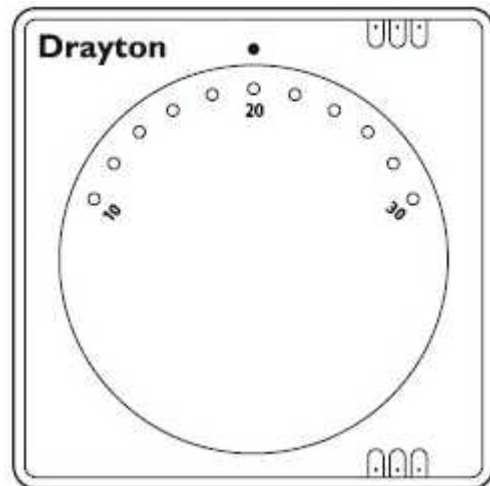

#### ***To set the temperature set point limits***

- Remove dial from the unit to reveal limit stops (approx. one notch is 1°C)
- Lift **right** arm to adjust **minimum** temperature set point on thermostat.
- Lift **left** arm to adjust **maximum** temperature set point on thermostat.
- Replace dial in same position it was taken off.