


Drayton

Biflo Valve Controls Packs with Optional Junction Box

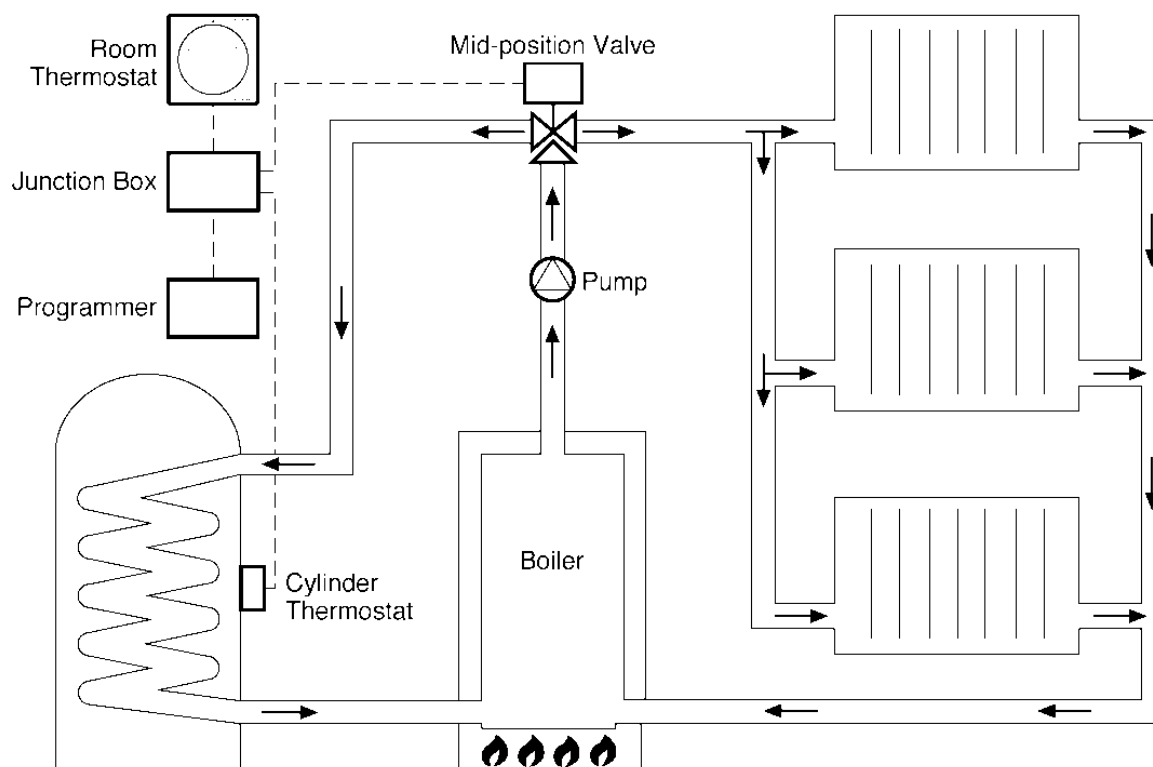

INSTALLATION AND WIRING GUIDE

CONTENTS

Programmer
Mid - Position Valve
Room
Thermostat
Cylinder
Thermostat
Optional LWC 3
Junction Box

INSTALLATION INSTRUCTIONS

PROGRAMMER

Please refer to separate leaflet.

ROOM THERMOSTAT

Please refer to separate leaflet.

MOTORISED VALVE



Installation

Install the valve in a clean, dry location where the ambient temperature does not exceed 52°C. Ensure that the motor housing is not below the valve body. The manual lever and motor cover retaining-screw should be left accessible and the valve position indicator visible.


Cut connecting copper tubes to allow 10-15mm penetration (22mm valve) or 22-25mm penetration (28mm valve) into the valve body, and ensure tube ends are square and free of burrs. Slip the compression nuts over the ends of the tubes, followed by the copper olives so that these fit within the threaded sections of the nuts. Offer up to the valve body, screw on and tighten the compression nuts by hand until finger tight and then tighten fully using suitable spanner or adjustable wrench.

Care must be taken not to over tighten or to put any mechanical force on the plastic parts of the valve.

Fitting/Removing Actuator

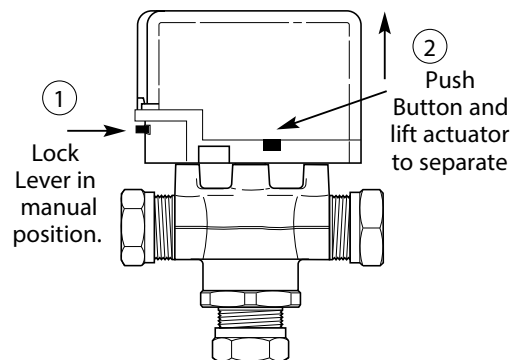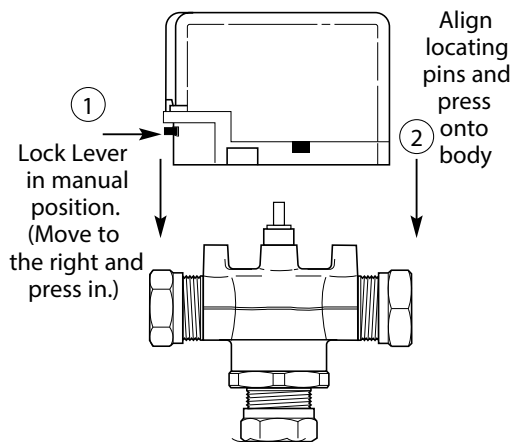

Minimum Clearances

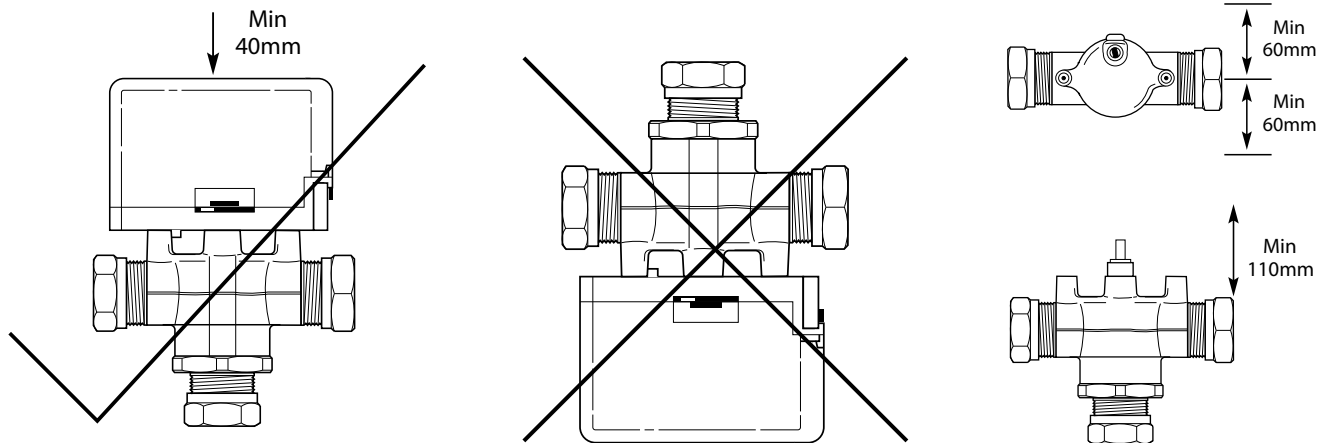

OPERATION

Mid position valves allow the flow of water from the valve inlet to be directed to either of two outlets, or through both at the same time. Signals from room and cylinder thermostats enable the valve's electronic circuitry to close either one of the outlet ports or to hold the swivel seal in the mid-position to leave both outlets open.

MANUAL LEVER

When the manual lever is moved to the right both outlet ports A and B are open.

The manual lever is used when filling, venting and draining the installation. To open the valve, the manual lever should be moved from left to right across the valve and then pressed in. When released it will lock in this position. It automatically releases when power is applied to the valve.

VALVE POSITION INDICATOR

In the mid position valve, this indicates which outlet ports are open.

W = Domestic Hot Water (Port B)

M = Both Water and Heating (Ports A and B)

H = Central Heating (Port a)

CYLINDER THERMOSTAT

Positioning

The HTS3 should be installed approximately one third of the way up the hot water cylinder, and at the front for ease of access. With pre-insulated cylinders, mark the position and size, and remove just enough insulation to allow the HTS3 to fit against the metal of the cylinder in the recess formed.

The base of the HTS3 should be held in good contact with the metal of the hot water cylinder.

The plastic covered spring fixing cable should be cut to an unstretched length of approximately 2 1/2" - 3" less than the circumference of the cylinder and the hook and eyelet screwed into the ends. Stretch the cable round the cylinder, above the insulation, and position it in the groove across the front of the HTS3. Engage the hook and eyelet.

Commissioning

The two setting marks outside the temperature scale on the HTS3 provide positive ON and OFF positions to assist with commissioning or checking the system operation. Rotate the setting arrow fully clockwise for ON, and anticlockwise for OFF.

Setting

With a screwdriver, position the setting arrow at the desired nominal hot water temperature. A popular setting is 60°C but if this is not exactly suitable, simply adjust up or down as appropriate.

Frost Protection

If frost protection is required, we recommend that a frost thermostat (RTS3) is fitted in series with a pipe thermostat (PTS1) to provide 'Two Stage' protection.

MID-POSITION VALVE Systems with LWC 3 Junction Box

LWC3 Junction Box

1	2	3	4	5	6	7	8	9	10	11	12
L	N	E									

CONNECTIONS

The numbers printed at the tip of each arrow represent the Wiring Centre Terminals to which those leads or terminals should be connected.

Pump

*7 2 E

↑ ↑ ↑

L	N	E
---	---	---

Boiler

* 1 2 3 7

↑ ↑ ↑ ↑

Perm. L	N	E	Switch L
---------	---	---	----------

* Refer to Boiler Handbook for wiring details of Pump Overrun boilers. Use boiler manufactures instructions.

Controls

Room Thermostat

3 2 1 4 5

↑ ↑ ↑ ↑ ↑

RTS 1&2		N	L	3	
RTS 4,6,9&10		N	L	1	3
Function		N	L	COM	CALL SAT.

Cyl. Thermostat

6 7 8

↑ ↑ ↑

Drayton HTS 3	C	1	2
Function	COM	CALL	SAT.

Programmer

Lifestyle LP722 LP522 LP241 LP112 SM2

2 1 8 NOT USED 6 4

↑ ↑ ↑ ↑ ↑

HW OFF CH OFF HW ON CH ON

N	L	1	2	3	4
---	---	---	---	---	---

Mains Input 230V 50HZ

Mains Isolator

1 2 3

↑ ↑ ↑

3A

L N E

Motorized Valves

5 8 7 2 3


↑ ↑ ↑ ↑ ↑

Drayton 22mm 3 Port Mid Position Valve	White	Grey	Orange	Blue	Yell/Green
28mm 3 Port Mid Position Valve					
Function of Leads	CH On	HW Off	Boiler Live & HW on	N	E


Every effort has been made to simplify the instructions and to ensure accuracy. However, the information is provided for guidance only and Drayton Controls are unable to accept liability for incorrect installation.

WHERE ANY DOUBT EXIST, PLEASE SEEK PROFESSIONAL ADVICE

FIRST FIX DIAGRAM

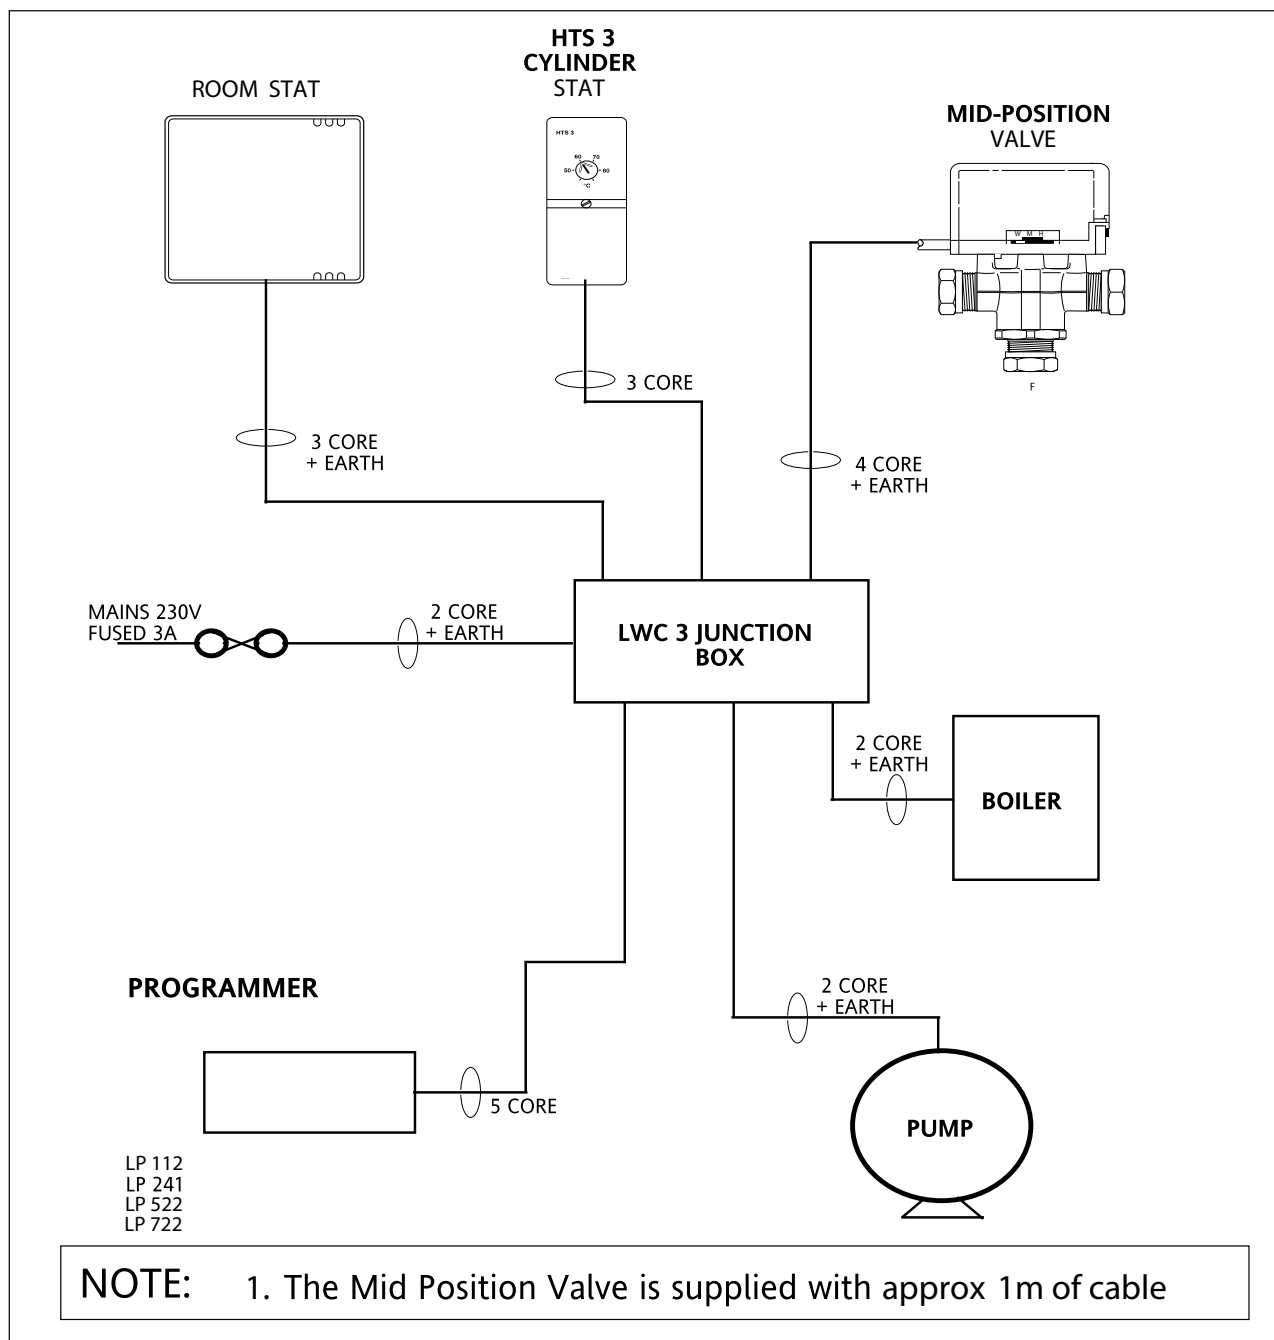

Recycling



This product should not be disposed of with household waste. Please recycle the products where facilities for electronic waste exist. Check with your local authorities for recycling advice.

CONFORMS TO THE ESSENTIAL REQUIREMENTS OF THE FOLLOWING DIRECTIVE

Relevant EU Directives:

2014/30/EU – Electromagnetic compatibility directive

2014/35/EU - Low voltage directive

2011/65/EU - RoHS directive

2012/19/EU - WEEE directive

Schneider Electric
401 Southway Drive
Plymouth
PL6 6QT

United Kingdom

Schneider Electric
35 Rue Joseph Monier
France-92500 Rueil Malmaison

se.com/contact



Standards: EN60730-1; EN60730-2-7; EN60730-2-9

Technical Helpline Tel: 0333 6000 622
customer.care@draytoncontrols.co.uk
Website: www.draytoncontrols.co.uk