

Drayton

by Schneider Electric

Digistat

3rd Generation

Wireless 2-channel Programmable Thermostat

Model: RF902

Consists of *Thermostat RF90T* and *Receiver RF90D*

Technical Helpline Tel: 0333 6000 622

Website: www.draytoncontrols.co.uk

Email: customer.care@draytoncontrols.co.uk

User and Installation Guide 06490311001 Iss E



Installation Guide

Before Installation

If you do not have the knowledge to install the thermostat safely then you must arrange for a competent electrician to install it for you. Wiring must conform to the current IEE regulations.

Prior to commencing the installation you must ensure the mains supply is switched off.


1. Installing the *Digistat Receiver*

1a. Location of the receiver

Location

The *Digistat Receiver* should be mounted in a convenient position, close to the boiler or central heating system wiring centre. It is recommended that the receiver is mounted on the wall nearest the final location and not less than 1m from the boiler side panel.

Warning: Installing the receiver too close to metal objects or mains cables may interfere with the radio signal.

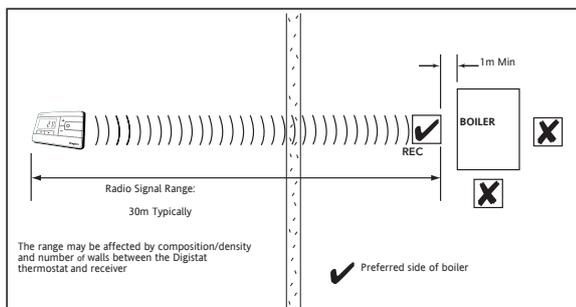


(Fig 1)

1b. Installation of the wallplate

Fixing (minimum wallplate clearances shown below)


- Loosen the securing screws, remove the wallplate, and if surface wiring is to be used, snap out the cable entry strip on the bottom edge of the wallplate with a pair of pliers.
- Fix the wallplate, terminals at the top, either direct onto the flat wall using wall plugs and no 6 x 1" wood screws or on a flush-mounting single conduit box using M3.5 x 14 screws.

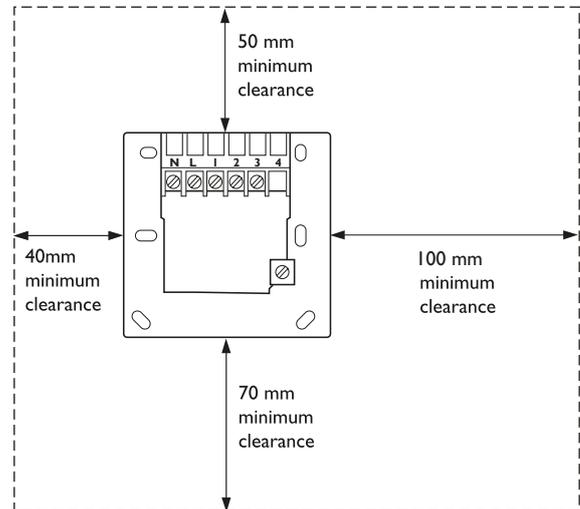

(Fig 2)

2. Wiring

This product is double insulated and does not require an earth connection. The receiver should be wired to the combi boiler or central heating wiring using the correct type of cable or flex. The receiver should be wired in to replace hard-wired room or programmable thermostats shown on the system or boiler wiring diagrams. Always check other manufacturers' instructions for compatibility.

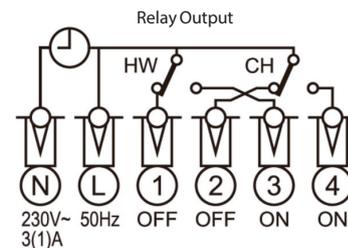

(Fig 3)

- Replace the front cover of the receiver by locating the two latches at the top and then fasten the two screws at the bottom. As soon as the *Digistat receiver* has power it will be ready for pairing with the *Digistat RF Thermostat*.

Note: Second channel can be used for hot water or second heating channel




(Fig 4)


4. Pairing guide for the RF902
 1. Press and hold cog 3s button until you see USER 01.
 2. Press the plus button twice until you see InSt 03 and press O button to select.
 3. You will now see bEEP 01, press minus twice to rSEt 20 and press the O button to select.
 4. no will be flashing, press plus button to see YEs is flashing
DON'T PRESS ANYTHING ELSE
(Go to receiver)
 5. Press and hold the left button until the lights flash orange and green, then release.

(Go back to digistat)
 6. Press the O selected button once to liven up screen and align to select YEs.
 7. SCAn will be displayed.
 8. After a few seconds you will see a big CH appear on the screen.
 9. Press the plus button so you see dHW and CH, press O and you will see PAIr rEC.
All lights will go off on the receiver.
 10. To test this has worked, press the plus button on your digistat to call for heat,
A green light will be visible on the receiver to indicate the call for heat this means it's all working.

5. Two heating Zones
 1. Pair the First Digistat up to step 8 from above.
 2. Press the O button to see the big CH on the Digistat, just press O. Do not press + to see dHW.
 3. It will display SCAn, then PAIr rEC and your first Digistat will be controlled on the right channel on the receiver.
 4. Pair the second Digistat up to step 7 from above.
 5. PAIr rEC will be displayed and your second Digistat will be paired to the left channel on the receiver.

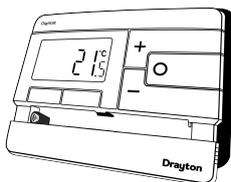

(Fig 5)

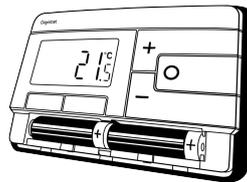

(Fig 6)

6. The Digistat is now installed and will automatically start to control room temperatures and hot water times.

INSTALLER OPTIONS

To make changes to the default Installer Options shown below, enter the Installer Options menu by pressing the settings button  for 3 seconds. This allows access to the User Menu 01, the Advanced User Settings Menu 02, the Installer Settings 03, and Service Interval Settings 04. Use the + and - buttons to scroll to Installer Options and press O to select. You can exit the menu by pressing  until you have returned to the home screen. In the Installer Options menu (Fig 7), scroll through the options using the + and - buttons and press O to select. Scroll through the different settings using the + and - buttons and press O to select and save. (Fig 8 shows Option 02 OFF).



(Fig 7)



(Fig 8)

(Option 01) Partial Sight Assistant (beep)

When enabled, audible tones indicate when the setpoint is more than, less than or equal to the current room temperature when a user manually adjusts the setpoint using the + button:
 Setpoint > room temperature - single high tone per 0.5°C increase
 Setpoint = room temperature - double tone
 Setpoint < room temperature - single low tone per 0.5°C decrease

(Option 02) Frost Protection

The *Digistat* will switch on the heating if the temperature falls to 5°C and maintains a temperature of 7°C even when in OFF mode.

(Option 03) Minimum Setpoint Limit

Change minimum setpoint temperature. After any changes to setpoint limits, all setpoints in AUTO, MANUAL, BOOST and HOLIDAY modes will be modified to conform accordingly.

(Option 04) Maximum Setpoint Limit

Change maximum setpoint temperature. After any changes to setpoint limits, all setpoints in AUTO, MANUAL, BOOST and HOLIDAY modes will be modified to conform accordingly.

(Option 05) Optimum Start

When enabled, this uses current ambient temperature, the next scheduled setpoint and heat gain data captured by the device to adjust the thermostat setpoint early, so the ambient temperature is at the required level when the next event starts.

Delayed Start

When enabled, this uses current ambient temperature, current event setpoint and heating characteristics of the environment to delay implementation of the setpoint if the ambient temperature is already close to it, therefore saving energy.

(Option 06) Valve Protection Time

In some hydronic heating systems it may be required to protect the valve by operating it for a given time. When enabled, this maintenance feature ensures that each relay output is operated for at least one (1) minute each week.

INSTALLER OPTIONS - continued

(Option 07) Sensor Fault Function

In the event of a sensor fault, central heating output is reduced to 30% by turning heating ON for 3 minutes, then OFF for 7 minutes.

(Option 08) Application Type

Select the central heating system energy type.

(Option 09) System Capability

Select the flow capability of the heating system.

(Option 13) Installer Settings Lock

When enabled, installers can lock the installer settings menu until a 3 digit code is entered. If the code is forgotten while device is locked, please call the Technical Helpline.

(Option 20) Reset (Service Interval settings are NOT reset)

Reset the *Digistat* to its original factory settings.

Note that resetting a thermostat will lose the pairing with the receiver.

(Si Option 01) Si Status

Enable or disable Service Interval Mode.

(Si Option 02) Si Type

Select effect imposed on the heating when service is due.

(Si Option 03) Service Due Date

Set date when next service is due.

(Si Option 04) Warning

Select no. of days before service due date.

(Si Option 05) Service Due Alarm

Enable or disable the audible service due alarm.

(Si Option 06) Si Boost

Enable or disable the Service Boost feature (5 boosts).

(Si Option 07) Password Reset

Change the 4 digit PIN. If you forget your Si password, please call the Technical Helpline.

Technical Data

Power supply	230VAC +/-10%, 50Hz
Switch type & rating	3(1)A 230V/50Hz
Min. recommended current	SPDT 10mA@24VAC (inductive)
Ambient temperature (receiver)	Operating 0°C to 45°C Storage - 20°C to 65°C
Ambient temperature (thermostat)	Operating 0°C to 40°C Storage - 20°C to 65°C
Ambient humidity (non condensing)	20% to 80%, 90% non-condensing
Temperature range	5°C to 30°C
Rated impulse voltage	4KV
Ball pressure test	75°C
Disconnection means	1B
Automatic action	100,000 cycles
Operating Frequency	2402-2480 MHz
Radio Frequency	433.92 MHz
Max RF Power transmitted (Bluetooth)	+10dBm
Pollution situation	Degree 2
Protection level	IP30
Wiring	Designed for fixed wiring only, to comply with IEE wiring regulations
Energy Class	IV = 2%
Relevant EC Directives:	2014/53/EU (RED) 2011/65/EU (RoHS) 2012/19/EU (WEEE)
Standards:	EN 60730-1 EN 60730-2-7 EN 60730-2-9 ESTI EN 300 328 ESTI EN 301 489 EN IEC 63000

	What is it	Screen Abbreviations	Select between			Default
Installer Options	01 Partial Sight Assistant	bEEP	OFF	ON		ON
	02 Frost Protection	FrSt	ON	OFF		ON
	03 Low Set Point C	LoSP	5	High Limit		5
	04 High Set Point C	HiSP	Low Limit	30		30
	05 Optimum Start	OPSt	OFF	Delayed Start	Optimum Start	OFF
	06 Valve Protection Time (Mins)	vPrt	OFF	5	4 3 2 1	OFF
	07 Sensor Fault Function	SEnS	OFF	ON		OFF
	08 Application Type	APPL	Gas	Electric	Oil Heat Pump	Gas
	09 System Capability	SySt	Fast Flow	Normal/Slow Flow		Fast Flow
	20 Lock Reset	rSEt	NO	YES		NO
Service Internal Options	01 Si Status	StAt	OFF	ON		OFF
	02 Si Type	tYPE	Reduced Comfort	Heating OFF	No Effect	Reduced Comfort
	03 Si Due Date	dUE	YY/MM/DD			
	04 Si Warning	WArn	0	99		30
	05 Si Due Alarm	ALAr	OFF	ON		OFF
	06 Si Boost	bSt	OFF	ON		OFF
	07 Si Password Reset	EXit	Select 4-digit PIN			0000

User Guide

The Drayton *Digistat* thermostat is a universal thermostat with 24 hour, 5-2day or 7day program types and up to 8 time/temperature events per day and can also be used as a simple room thermostat.

Clock Setting

- Press and hold the cog button until User 01 appears,
- Press the plus button to Advanced 02, then press O to enter,
- Press O to enter Time settings,
- Using the + and - you can adjust the time, then press O to save,
- Press the cog button twice to bring you back to the home screen.

General Operation

Programmable thermostats do not have "On" and "Off" times like traditional timers. They offer temperature control both day and night and you simply select which temperatures you require at each point in the day.

With the unit in "Auto Mode" (the calendar icon is visible at the bottom of the screen) the temperature can be changed for a short time by using the + and - buttons. Changing the temperature in this way will keep the *Digistat* set to your new temperature until the next pre-programmed event (at which time it will revert to programmed temperature). The temperature you are setting will flash on the screen. Once temperature is set, the unit will revert to showing the room temperature again. The  indicator will show on the screen if the unit is calling for heat.

Programming the Digistat

Your *Digistat* comes with the following settings pre-programmed for your convenience and is suitable for those working out of the house during a typical 9-5 pattern. When the 5-2day program type is selected the pre-set temperatures will be different Mon-Fri and Sat-Sun, as per the tables below:

Pre-set Program 1 (24h, 5-2day weekdays, or 7day):

Event	1	2	3	4	(5)*	(6)	(7)	(8)
Time	06:30	08:30	16:30	22:30				
Temperature	20°C	16°C	21°C	OFF				

Pre-set Program 1 (5-2day weekend):

Event	1	2	3	4	(5)*	(6)	(7)	(8)
Time	07:00	09:00	16:00	23:00				
Temperature	20°C	18°C	21°C	OFF				

*To add these additional time periods manually (max. 8 per day) please refer to the steps to the right.

The Bluetooth® word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Schneider Electric is under license. Other trademarks and trade names are those of their respective owners.


Hereby, Schneider Electric Controls UK Ltd, declares that Digistat RF902 is in compliance with Directive 2014/53/EU. The declaration of conformity may be consulted at www.draytoncontrols.co.uk

Setting up Times/Temperatures on the Digistat


1. With the product operating as normal in Auto Mode, press  once. Use + and - to select the day or set of days you want to adjust the times and temperatures for. Press O to confirm.




2. The time on the display will now be flashing as shown, use + and - to adjust the first period start time. Press O to confirm.

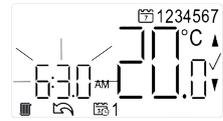


3. Once the time has been set the temperature on the display will now be flashing, use + and - to adjust the temperature for the first time period. Press O to confirm.

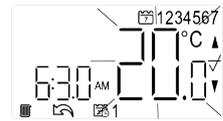


4. Move to the next time and temperature periods and adjust as needed, confirming the changes by pressing O. The new schedule will be saved pressing O when the word SAVE is flashing.

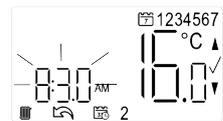

5. In Pre-set Program 1 you will have 4 time periods available, to add more (max. 8 per day) press + when you see the SAVE option on-screen and time period 5 at the bottom of the screen, to scroll to the Add option. Press O to add time period then adjust time and temperature as required.

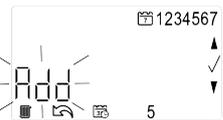

6. To exit press  to go back until you return to the home screen.

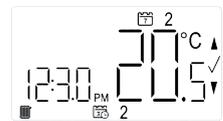

Heating or Hot Water

1. Press the cog button so the tap or radiator symbol in the bottom left-hand corner starts to flash,
2. Press the + button to change between the options, then press O to select your option.

Automatic to Manual

1. Press and hold the Cog button until you see USER 01,
2. Press the O button to select and you will see Mode,
3. Press O to enter and you will see either Auto, man or off.
4. Use the + and - button to choose between these options.
5. Press the O button to select your option then press the Cog button twice to take you to the home page.

Where to find User Guide

Please use the QR code to the right or go to our website www.draytoncontrols.co.uk to download our full online user guide which also features Bluetooth pairing, and how to use the smartphone app.

User guide



Schneider
Electric

401 Southway Drive
Plymouth
PL6 6QT
United Kingdom

Schneider Electric Industries SAS
35 rue Joseph Monier
F-92500 Rueil-Malmaison
France